

## Day 3 Quick Reference Index

Staged Design Option	20, 75, 78, 84, 93, 107, 146, 160, 237
Volume Report Interpretation (with Strata Surfaces)	29, 44-51, 58, 61-63, 158-163, 180-181, 223-227, 267
Import Strata Surface Data	38
Strata Surface Interpolation Options	41
Evaluating Profile Views	41, 42, 51, 157, 171, 227
Manage Surfaces Utility (AGTEK 4D)	41, 99
Freeze (Lock) Strata Surfaces	42, 59, 76, 229, 248
Clip Strata Utility (AGTEK 4D)	42
Image Selection Utility (Gradework 4D)	53
Capture Strata Cut Map Colors for Background Image Display (Gradework 4D)	53
Surface Perimeter Cautions for Some Strata Calculations (AGTEK 4D)	56-57, 61-62
Copy/Paste Surface Layer Data	59, 107, 114, 176, 248
Volume Report Interpretation (for Site Balancing)	63, 64-67, 71-72, 276-277
Raise/Lower Function	65-66, 76, 119, 159, 170
Offset Line Utility	71, 75, 118, 168, 251
On-Grade Limit Utility	73, 75, 78, 84, 146, 160, 170, 237, 257, 277
Cut-Fill Lines Utility	73, 160, 170, 175, 237
Stripping Area Entry Examples	74, 81-82
Conform Selected Utility (To Current Surface)	76, 128
Length/Area Utility	76, 79, 85, 147, 156-157, 238, 265
Label Select Utility (Ctrl-L)	76, 192
Trim Lines Utility (Ctrl-T)	76, 134, 192
Balance Regions (for Extra Work and Break-Out Quantities)	87-89, 95-97, 143-145, 153-154, 179-180, 255-256
Horizontal Slice (Vertical Interval) Balance Regions Volume Report	90, 155, 262-263
Transfer Subgrade Utility	93
Volume and Haul Reports (Combined Evaluation)	96-97, 110-111, 122-123, 136-137, 144-145, 180-181, 234-235
New Surface Utility	98, 105, 231
New Surface Perimeters, Report Regions and Annotation Layers (AGTEK 4D)	98-100

## Day 3 Quick Reference Index (Cont.)

Report Region Entry Examples	100, 161, 162, 267
Stage Into Utility (AGTEK 4D)	101
Calc Survey Volume Utility (for Extra Work and Break-Out Volumes)	104, 236
Cut/Paste Surface Layer Data (AGTEK 4D)	107, 128
Apply Survey Utility	108
Stage Over-Ex Utility	113-120, 166-179, 240-245, 249-255
Convert Daylights Utility (AGTEK 4D)	118
Slope-Intercept (Daylight) Offset to Any Surface	119, 251
Apply Template Utility (AGTEK 4D)	130-134, 150-153
Over-Ex Guide (Gradework 4D)	139-145
Lowest Surface Utility	146-149
Vertical Surface Area Function (Length/Area Utility Option)	156-157
Balance Regions for Haul Planning (Paint/Brush Method - Earthwork 3D/Gradework 4D)	257-262
Volume Report Interpretation (Fundamentals)	269, 276-277
Volume Calculation Error and Warning Dialogs	281